INSTALLATION MANUAL

Dongle IQ3 motor
Dongle IQ3 motor
Dongle IQ3 Motor
Dongle moteur IQ3

RW500

BREL HOME

www.brel-home.com

Visit our website for more manuals and information

⚠ Warning



Do not operate the motor in humid surroundings.
Plaats de motor niet in een vochtige omgeving.
Verwenden Sie den Motor nicht in feuchter Umgebung.
Ne pas travailler avec le moteur dans des environnements humides.



The motor must be protected from direct moisture influences.
De motor moet beschermd worden tegen water en andere vochtige invloeden.
Der Motor muss vor direkter Feuchtigkeit geschützt werden.
Le moteur doit être protégé contre l'influence directe de l'humidité



The motor must be installed correctly.
De motor moet correct worden geïnstalleerd.
Der Motor muss korrekt installiert sein.
Le moteur doit être installé correctement



BREL-Motors declares that this motor has been manufactured according to the guidelines of the CE standard 1999/5/EC
Brel Motors verklaard dat de motor is gefabriceerd volgens de CE standaard 1999/5/EC norm
BREL-Motors erklärt hiermit, dass dieser Motor nach den Richtlinien der CE-Norm 1999/5/EG hergestellt wurde
BREL-Motors déclare que ce moteur a été fabriqué selon les directives de la norme CE 1999/5/CE




Keep the antenna in a good condition and do not shorten. The antenna should not come into contact with other metal parts otherwise it will reduce the function.
De antenne moet in goede conditie verkeren. Kort deze niet in. Zorg ervoor dat de antenne niet in contact komt met andere metalen. Gebeurt dit toch dan beïnvloed dit de functie.
Halten Sie die Antenne in gutem Zustand und verkürzen Sie diese nicht! Die Antenne darf nicht mit anderen Antennen oder Metallteilen in Berührung kommen, da ansonsten der Betrieb eingeschränkt wird.
Maintenez l'antenne en bon état et ne la raccourcissez pas. L'antenne ne doit pas entrer en contact avec d'autres pièces métalliques, sinon la performance en sera réduite.



Do not allow children to play with the roller blind control unit. Keep remote controls out of reach of children. Children cannot recognize the dangers of electrical equipment and are therefore not allowed to work with it

Keep these instructions for future reference
Bewaar deze handleiding zodat u in de toekomst deze kunt raadplegen
Conservez ces instructions pour référence ultérieure
Die Anleitung für zukünftiges Nachschlagen aufbewahren

Product information

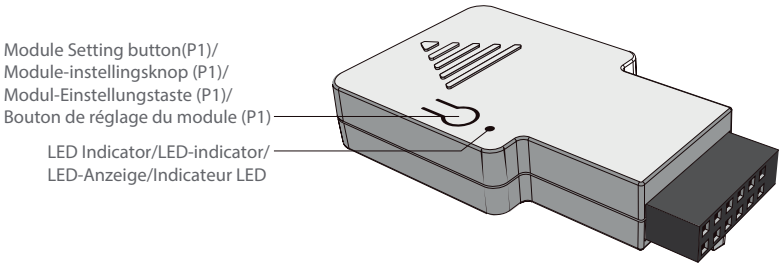


Technical data of the motor


	IQ3
Voltage | Spanning | Stromspannung | Voltage	DC 3V
Frequency | Frequentie | Frequenz | Fréquence	433.05 - 434.79 MHz
Temperature | Temperatuur | Temperatur | Température	-20 ~65

Matchable Emitter

THW2501

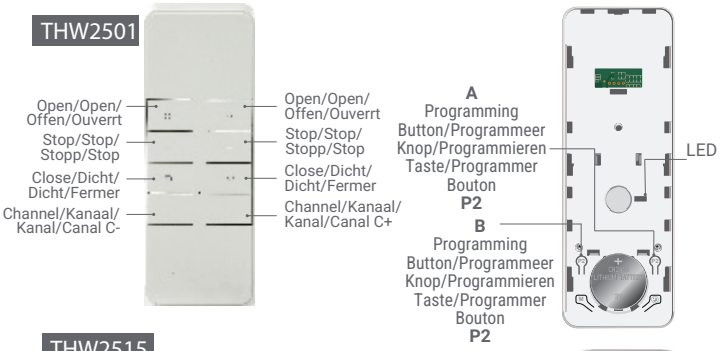


THW2515

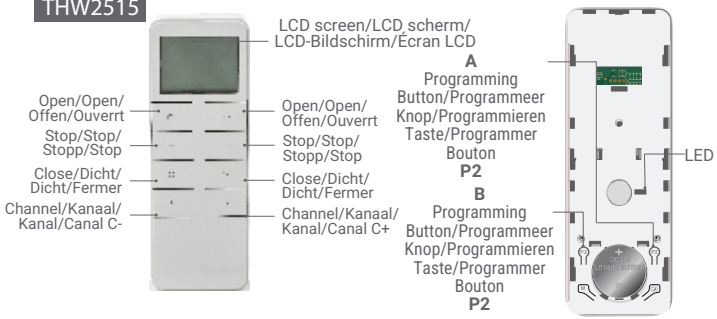


Pairing

To set the end positions, use the cable from Benthin

Method one

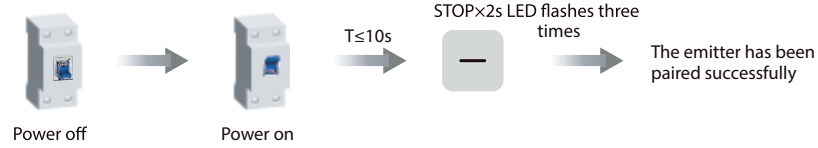

Method two



Pairing / Deleting Additional Emitters

Note: 1,At max 10 channels can be stored. More than 10 channels, adding a new channel will result in the last channel being cyclically overwritten.
2, as existing emitter, as new emitter to pair/delete


Method one



Method two



Method three



Delete All Emitters

